


Tabella degli spostamenti dei nodi

Legenda

- Nodo = indice del nodo
 u = spostamento del nodo in direzione X
 v = spostamento del nodo in direzione Y
 φ = rotazione del nodo

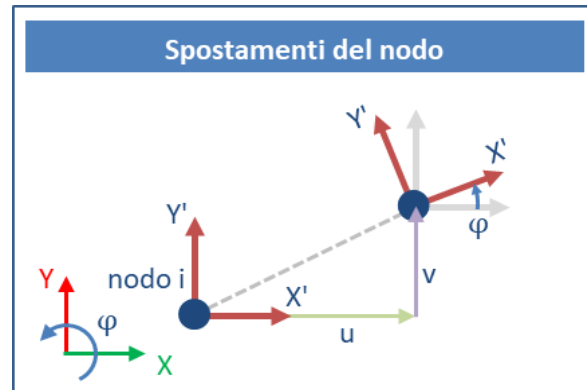

Nodo	u [mm]	v [mm]	φ [rad]
1	0.0E+00	0.0E+00	0.0E+00
2	-2.1E-02	-2.0E-01	-6.8E-04
3	-1.9E-02	-3.3E-01	-4.4E-04
4	1.1E-01	-4.0E-01	-1.2E-03
5	0.0E+00	0.0E+00	0.0E+00
6	-1.1E-02	-4.3E-01	5.5E-05
7	-8.6E-03	-7.2E-01	-1.1E-05
8	7.1E-02	-8.8E-01	7.6E-05
9	0	0	0
10	-9E-15	-0.402	-4.3E-19
11	5.19E-15	-0.66557	-3.3E-18
12	3.28E-14	-0.83131	-1E-18
13	0	0	0
14	0.010588	-0.43333	-5.5E-05
15	0.008608	-0.72469	1.11E-05
16	-0.07095	-0.87579	-7.6E-05
17	0	0	0
18	0.021109	-0.199	0.000677
19	0.01902	-0.33141	0.000436
20	-0.10916	-0.39594	0.001177